


Remove the Repeater Module from the DIN Rail

To remove the module from the DIN rail, do the following:

1. Insert a screwdriver into the module locking tab.

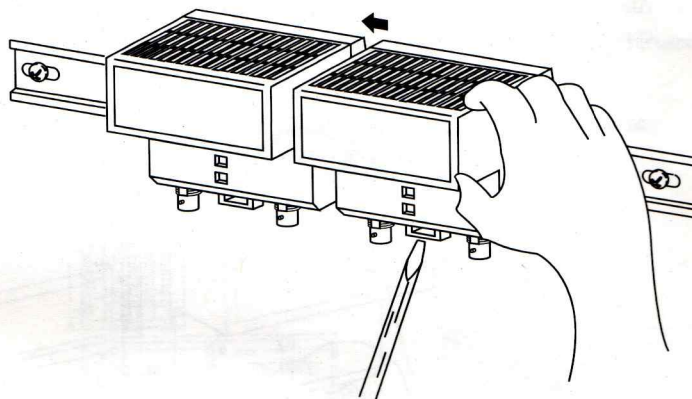

31491-M

2. Gently pry up on the locking tab.

The module should detach from the DIN rail. If the module does not unlock, try more pressure while you pry up on the locking tab with the screwdriver.

Connect the Repeater Module

TIP

If you need to connect only one coax channel on the 1786-RPCD module, you can use either channel 1 or channel 2. Both channels 1 and 2 operate identically and can be used interchangeably.

Be sure to terminate the unused channel with a 75- Ω terminating resistor (1786-XT).