


Connect the Module For Coax Channels 1 and 2

1. Connect the ControlNet tap to port #1.
 - a. Align the knob of the BNC cable connector with the locks of the BNC module connector, and insert the connector into channel 1.

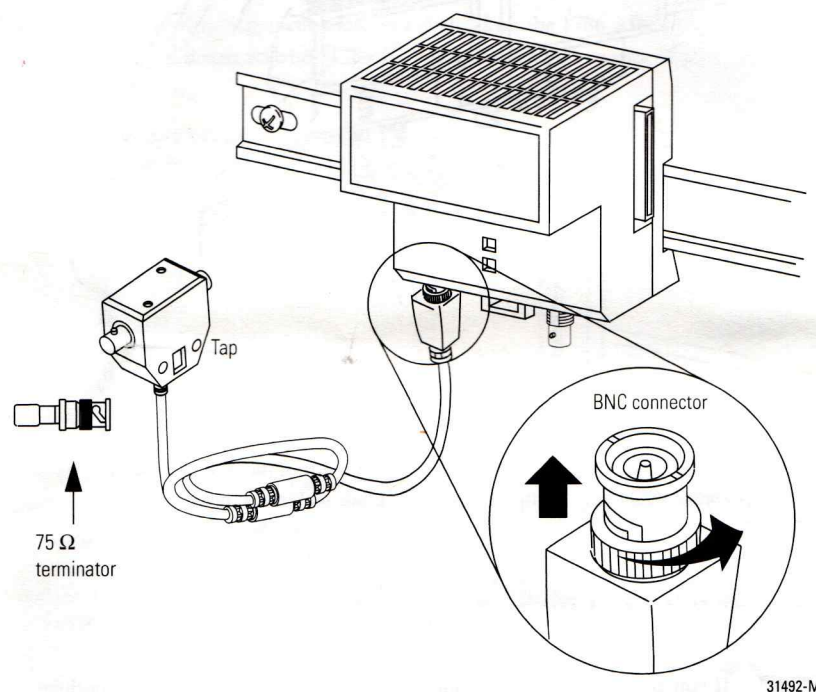

- b. Twist the BNC connector until the bayonet lug is locked into place.
2. To connect channel 2, repeat Step 1 for channel 2. If channel 2 is not used, connect a 75-Ω terminating resistor (1786-XT) to the port labeled channel 2.
3. For examples of properly connected channels, refer to the example topologies on pages 15 through 17.