


8 DeviceNet Digital Base Terminal Block CompactBlock LDX I/O

The base block reads the rotary switches only when power is applied. Switch settings between 64 and 99 cause the base block to use the last valid node address stored internally.

In this example, the node address setting is 11.

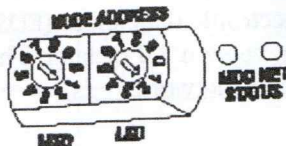

44152

You can also set the node address through RSNetWorx for DeviceNet software or a similar configuration tool.

When you use software configuration for the node address, set the switches between 64 and 99.

Mount the Base Block

Mount the base block to a panel or DIN rail. We recommend that you ground the panel or DIN rail before mounting the block.

IMPORTANT

The analog base module can accommodate a maximum of two digital expansion modules.